



# LTE HOME

## THE GUIDE TO GET STARTED



### LTE HOME

Your LTE Home service reaches your premises via an externally mounted modem with access to the Digicel high-speed data network. An indoor router then distributes the signal via an Ethernet cable or Wi-Fi throughout your home.



**B2368-A21 ODU**  
Wireless Modem



**SNT151**  
Wireless Router

## YOUR INDOOR ROUTER

Wireless Router-Front



Wireless Router-Back



Reset Button  
LAN Connection  
Phone Connection  
WLAN Connection from Adapter  
Power Adapter

### ROUTER LABEL

Your router's label indicates:

- MAC address
- Serial number (SN)
- Wi-Fi Name (SSID)



### HOW TO CONNECT YOUR DEVICES

You can easily connect up to 5 devices to your indoor router using Wi-Fi or Ethernet cable

### HOW TO CONNECT A LAPTOP OR DESKTOP DIRECTLY TO THE ROUTER

Plug one end of the Ethernet cable into your device then plug the other end into one of the LAN connections located at the back of the router.

### HOW TO FIND YOUR WI-FI NAME AND PASSWORD

Your default Wi-Fi name and password are located underneath your indoor router.

### HOW TO CHANGE YOUR WI-FI NAME

- Step 1: Open your web browser & type in the IP address
- Step 2: Enter IP address, 192.168.22.1 in the address bar
- Step 3: Enter default username (admin) and password (admin)
- Step 4: Select "Wireless" from the menu on the left
- Step 5: Select "Basic Settings"
- Step 6: Enter your new Wi-Fi name in the SSID field
- Step 7: Click "Modify"

### HOW TO CHANGE YOUR WI-FI PASSWORD

- Step 1: Open browser (google chrome, explorer etc.)
- Step 2: Enter IP address, 192.168.22.1, in address bar
- Step 3: Enter default username (admin) and password (admin)
- Step 4: Select "Wireless" from the menu on the left
- Step 5: Select "Security"
- Step 6: Enter your new password in Pre-Shared Key Field
- Step 7: Click "Modify"

Dial 145 from your DIGICEL mobile or  
(876) 619-3444